



Air Shock Replacement – Double Shock design

Tools Required:

- 14 mm socket wrench
- 5 mm Allen wrench

Procedure:

- 1) Fold deck into storing position.
- 2) Remove top nut on air shock with 5 mm Allen wrench and 14 mm socket wrench (Figure 1).

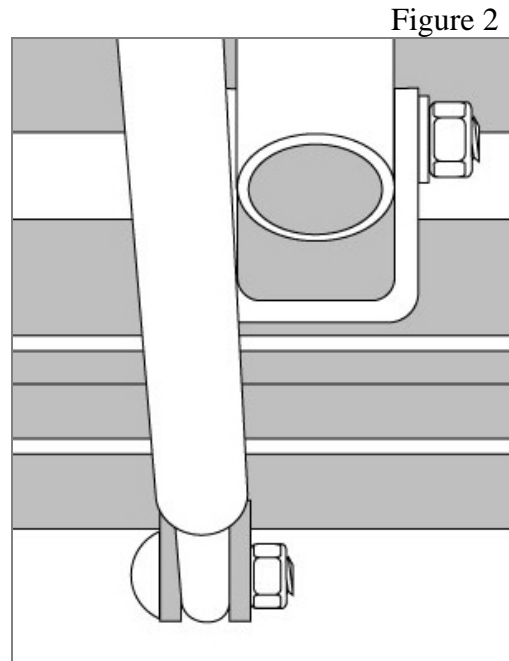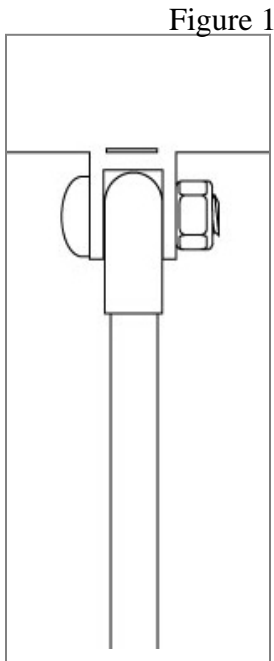

- 3) Push deck upright and slide top of air shock out of bracket.
- 4) Leave bottom screw and nut secured and unthread shock from bottom using 12 mm combination wrench or pliers.
- 5) Remove bottom screw.
- 6) Thread the new shock through the bottom hole first and tighten the nut.
- 7) Thread the new shock through the top hole and tighten the nut.