




# Rerouting the CST3.5 & 4.5 Console Cable

## Tools required:



- 4mm and 5mm Allen wrench
- Philips Screwdriver
- Wire Cutters
- Zip Ties

## Procedure:

- 1) Turn off the power to the treadmill and unplug the power cord from the wall outlet.
- 2) Remove screws (A) connecting faceplate to console shell (Figure 1).
- 3) Disconnect console cable from upper board, also remove screw holding green and yellow ground wire to the frame and set faceplate aside.
- 4) Remove screws holding console shell to handle bar frame. (Figure 2).

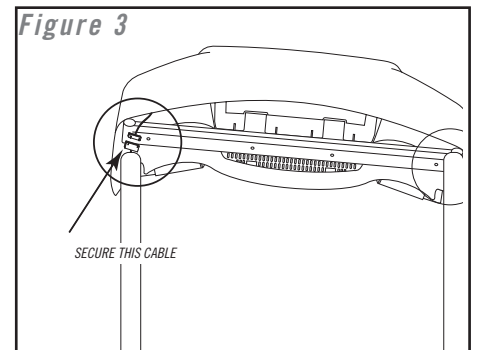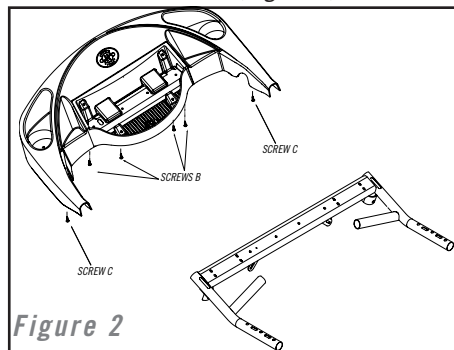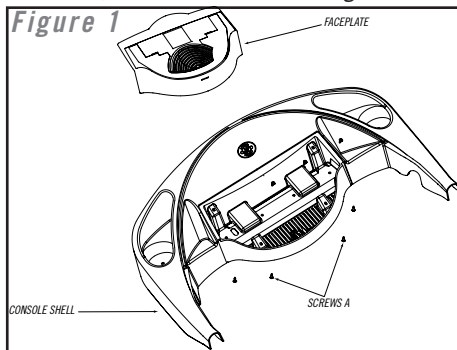

- 5) Remove console handlebar extensions (CST 3.5) or handlebars (CST 4.5) and support bars.
- 6) Remove console handlebar frame from console mast and disconnect console cable in the upper left hand corner of the console. Secure cable so that it does not fall down console mast (Figure 3).

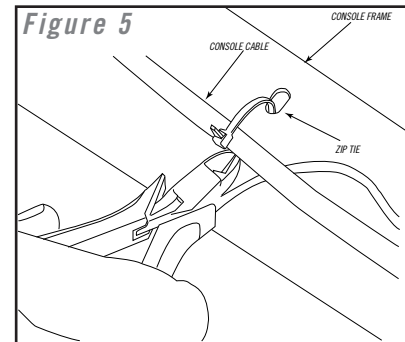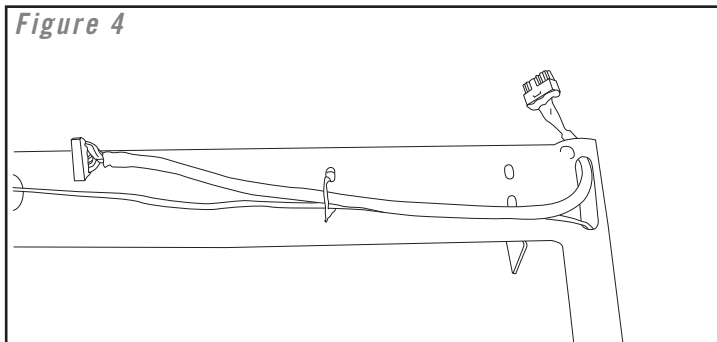

- 7) Cut zip ties that hold console cable to the handle bar frame. (Figures 4 & 5)
- 8) Install new console cable (Figure 6) and secure it to the handle bar frame with zip ties.
- 9) Re-assemble by reversing steps 1-6.

